



INSTALLATION INSTRUCTIONS

Accessory

**BIMINI TOP (2P)
P/N 0SR85-HL3-322B**

Application

SXS700M2

Publication No.


MII 14607

Issue Date

August 2013

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

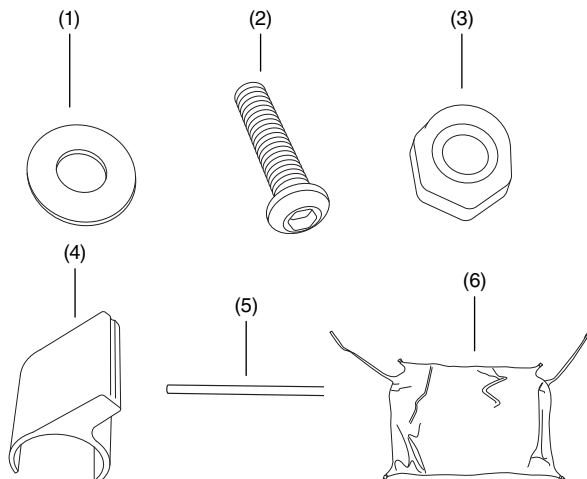

No.	Description	Qty
(1)	6 mm flat washer	2
(2)	6 x 30 mm screw	2
(3)	6 mm locknut	2
(4)	Bar snap	4
(5)	Fiber rod	2
(6)	Bimini top	1

TOOLS REQUIRED

Hex wrench (4 mm)
Phillips screwdriver (# 2)
Propane torch
Fine tooth hand saw
Sanding block

TORQUE VALUES

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


USE AND CARE INFORMATION

- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with a hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.

Bimini Top Preparation for Installation with a Poly Windscreen

⚠ CAUTION

- To prevent burns, wear gloves when using the torch or handling hot tools.
1. Place the bimini top upside down on a flat surface with the plastic windscreen insert facing up.
 2. Support the bimini top so that it is two inches above the work surface as shown.
 3. Using a small propane torch, heat the end of a #2 phillips screwdriver for 15 seconds.
 4. Using the plastic windscreen insert as a guide, make two holes through the fabric by pushing the screwdriver tip through the fabric.

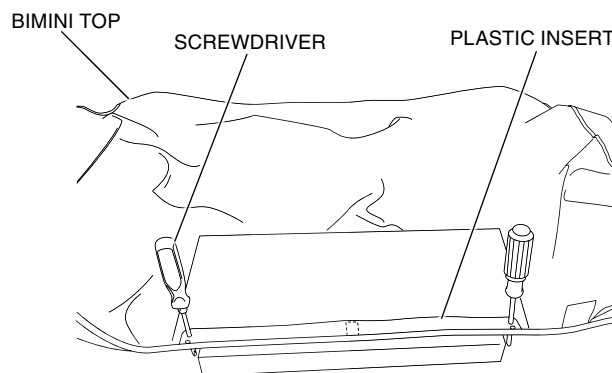

Two-piece Poly Windscreen Preparation for Installation with the Bimini Top


⚠ CAUTION

- To prevent eye injuries, wear eye protection when using the saw.

NOTE

- Remove the poly windscreen from the vehicle if it is already installed.
- Prepare a clean work area free of debris that may scratch the windscreen.


- Place a strip of masking tape along the top three inches of the outside surface of the windscreen.
- Use a straight edge and marker to mark a straight line across the windscreen as indicated by the dotted line on the diagram.
- Make two marks, 9-1/4 inches from the centerline and 1/2 inch below the cut line, as indicated by the cross hairs in the diagram.
- Use a fine tooth jig saw or fine tooth hand saw to carefully cut the windscreen along the marked line.
- Use a fine tooth file or sanding block to deburr the edge of the windscreen.
- Drill a 1/4 inch hole through the windscreen at each mark made in Step 3.
- Remove the masking tape. Clean and reinstall the windscreen.

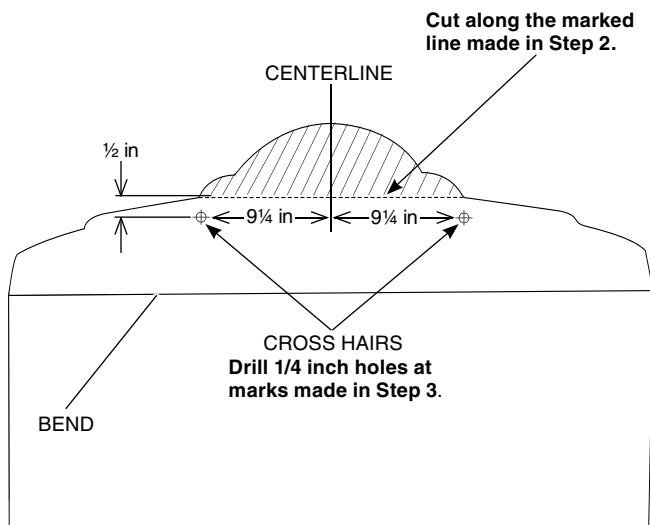


INSTALLATION

⚠ CAUTION


- To prevent injury from splinters, wear protective gloves when handling the fiber rods.
- Install the bar snaps and fiber rods to the front and rear cab frame cross bars.

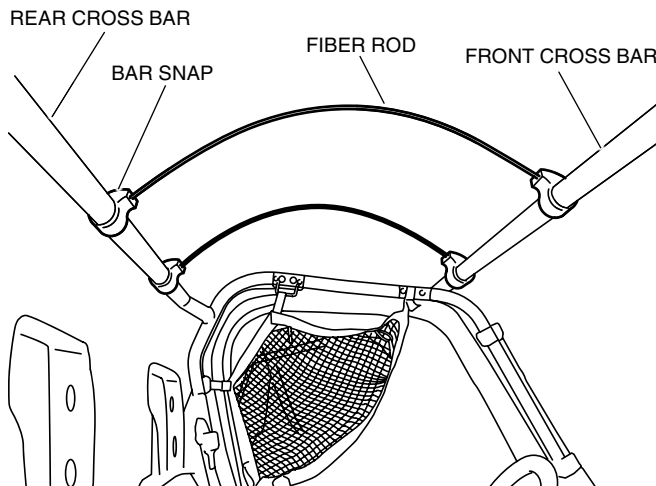

- Lay the bimini top over the cab frame.
- If a poly windscreen is used, insert the supplied 6 mm screws through the bimini top, windscreen and mounting brackets.
- Install 6 mm flat washers and 6 mm locknuts onto the screws and tighten them.
- Remove the front straps (if installed) from the bimini top and wrap them around the vertical bar, below the front junction of the cab frame, and then through the loop sewn in the end of the strap as shown.
- Route the straps up along the cab frame and then through the ladder locs. Do not tighten the straps at this time.

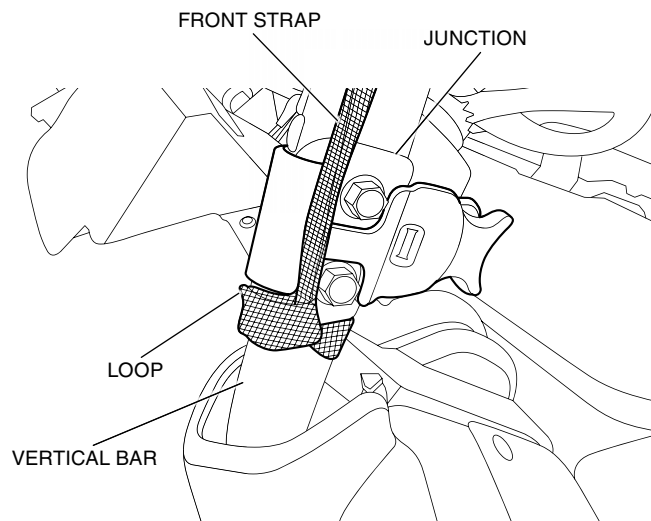

7. Release the buckle on the back of the bimini top.
8. Wrap the strap around the seat headrest frame as shown and then fasten the buckle.

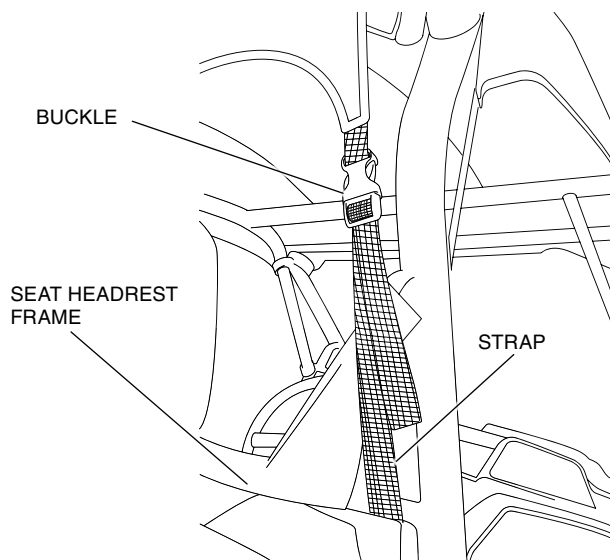

9. Tighten all the straps evenly to secure the bimini top and align its seams with the cab frame.

